



captivating casual dining

Bring the intoxicating aromas, sights and sounds of your menu to the guest as you captivate their senses with the Simplicity range of cookware.



Casserole
11010337 D 9 5/8" H 4 1/2" (104 oz)
11010334 D 8 3/4" H 4" (75 oz)
Casserole Lid
11010338 D 9 5/8" (Fits 0337)
11010335 D 8 3/4" (Fits 0334)



Oblong Roaster
11010331 L 14" W 12" (125 oz)
11010342 L 12" W 10" (80 oz)



Square Roaster
11010329 L W 10" (65 oz)



Oval Eared Dish
11010321 L 13 1/2" W 7 1/2" (36 1/2 oz)
11010320 L 12" W 6 1/2" (27 1/2 oz)
11010319 L 9 1/2" W 5 1/2" (12 1/2 oz)
11010318 L 8" W 4 1/2" (6 1/2 oz)



Round Eared Dish
11010317 L 8 1/2" (27 1/2 oz)
11010316 L 7 1/2" (19 oz)
11010191 L 5 3/4" (6 1/2 oz)



Oval Sole Dish
11010326 L 11" W 7 1/2" (52 oz)
11010327 L 8 1/2" W 5 1/2" (19 oz)
11010315 L 6 1/4" W 4 1/2" (10 1/2)



Presentation Pan
11010866 D 10" (33 1/2 oz)



Oval Baker
11010400
 L 6 1/4" W 4" H 2"
 (13 oz)



Lipped Oval Baker
11010328
 L 6 1/4" (13 oz)



Rectangular Tray
11010366
 L 6 1/2" W 4 3/4"
 (17 1/2 oz)



Soup Bowl w/Lid
11010828 D 4 7/8" L 6 1/4" H 3" (15 oz)
Soup Bowl Base
1101B828 D 4 7/8" L 6 1/4" H 2 1/4" (15 oz)
Lid
11010829